


CUCINA

by *Giani*

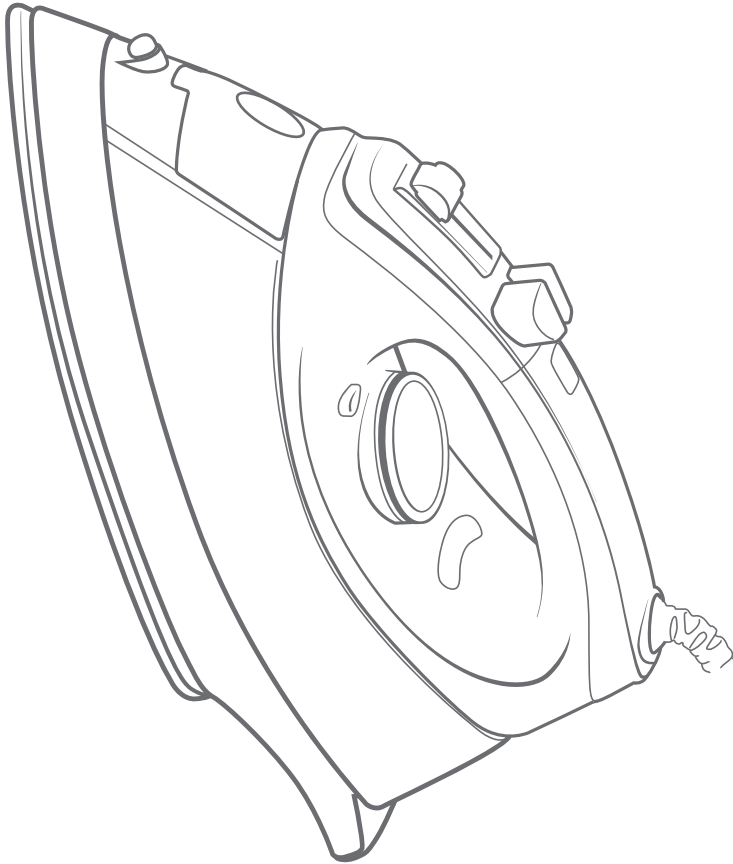

2200W Steam Iron

Instruction Manual

Model Reference: GCSW-3088A

Contents

Introduction	page 01
Safety Instructions	page 01
Specifications	page 02
Features	page 02
Directions for use	page 03
Temperature Controls	page 04
Troubleshooting	page 05
Disposal	page 05

Introduction

Congratulations on choosing to buy a Giani product. All products brought to you by Giani are manufactured to the highest standards of performance and safety.

We hope you enjoy using your purchase for many years to come.

When using the product for the first time:

Please ensure you follow these instructions

- The soleplate has been protected with oil, this may cause smoke the first time it is switched on, however this will cease after a short while.
- Before using for the first time remove any stickers or protective foil from the soleplate. Clean the soleplate with a soft, dry cloth.
- To ensure the soleplate is kept smooth avoid contact with metal objects such as buttons and zips.

Safety Instructions

- Please read this instructions manual before using the Giani Cucina 2200W Steam Iron
- This appliance should only be used as described in the manual.
- Do not immerse the appliance in water or other liquids.
- Always inspect the appliance before use for noticeable signs of damage. Do not use if damaged, or if the appliance has been dropped or if it is leaking.
- Do not use the appliance if the lead is damaged. In the event of damage discontinue use immediately.
- Do not leave the appliance unattended while connected to the mains supply.
- Do not place the appliance on any heat sensitive surface whilst in operation.
- The iron must only be rested on a stable surface
- Always switch off and unplug the appliance when not in use.
- Before use, please check the voltage of the product is compatible with your mains power.
- Keep away from children, this appliance must be used by a responsible adult.

Technical Specifications:


UK Guarantee

This appliance is guaranteed for consumer use for 12 months.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons.

Rated voltage	230V	Temperature adjusting range	150~220°C
Rated frequency	50Hz	Outside measurements	30.1 x 12.3 x 15CM
Rated power	2200W	Soleplate measurements	302.6CM2
Water capacity	330g	Type of appliance	Class I
Steam capacity	10~25g/min		

Main Features:

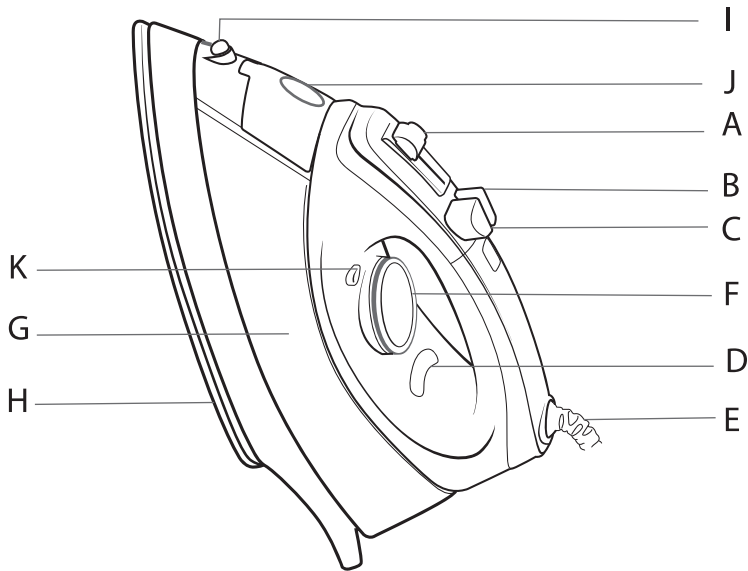

- A: Steam regulating switch
- B: Strong steam button
- C: Spraying button
- D: Indicator bulb
- E: Rotating power cord
- F: Temperature control thermostat*

- G: Water tank
- H: Non-Stick Soleplate
- I: Spraying nozzle
- J: Cover of water compartment
- K: Self-clean button

* Temperature Control thermostat adjusts the temperature range according to materials.

Thermal Fuse protection: If the temperature malfunctions the fuse will cut off the power automatically.

Directions for Use

Steam ironing:

- Before ironing, please check the label in your clothing to ensure it can be ironed.
- Pull up the cover on the water compartment and fill with water until it reaches the “max” position. Water capacity is 330g.
- Push the cover back to its original position.
- Turn the temperature control thermostat to the “0” position, ensure the iron is standing upright on an even and stable surface.
- Plug the iron into the mains power supply.
- After about 1.5 to 3 minutes, the indicator light will turn on and the appliance is ready to start steam ironing.
- Select the correct temperature for the material you are ironing.
- Press the steam button, the steam will emerge continuously (it can be used in vertical or flat position). If you want to stop the steam, just switch off the steam button.
- If you press the strong steam button a burst of steam will come out from the soleplate (it can be used in vertical or flat position).
- Vertical steam ironing: perfect for clothing which can not be ironed directly, hang the garment up and move your iron up and down the clothing about 2cm from the surface, the steam will help the wrinkles to smooth out.
- For stubborn wrinkles or sharp creasing press the Spray button during ironing, this will eject a spray of water from the spraying nozzle.
- If no steam comes out, of the iron it means there is no water in the water compartment. Turn off the steam button. If you want to refill the water compartment please make sure the iron is unplugged first.
- After ironing is complete, turn the temperature regulating knob to “0” position, and unplug from the mains. Pour out any water remaining in the water compartment and turn the temperature regulating knob to the “MAX” position. Plug into the mains socket again and press the steam button repeatedly, until no water remains. This method is used to prevent remaining water draining into the boiloff box, and damaging the steam function.
- Do not store clothes in wardrobes and drawers immediately, allow to hang on a rack until dry.

NOTE:

- When the water compartment calcifies, use the Self-cleaning function to clean the soleplate. Ensure the water compartment is filled with water.

Functions:




- High pressure steam function: helps remove stubborn wrinkles, great for steam ironing
- Dry cleaning function: Strong and powerful steam just like dry cleaning
- Sterilization function: 100C high temperature steam, kills all kinds of germs. It can be used in your kitchen, on toys, mattresses, furniture etc, removes bad odours.

Temperature Control

Always refer to the care label in the garment to make sure your temperature control setting is correct.

It is always recommended to turn your clothing inside out when ironing to avoid any marking or damage to the outer.

For heat sensitive fabrics, or fabrics with prints cover the area which is being ironed with a lightly damp cloth and iron over the top of the cloth.

Fabric	Temperature setting	Ironing Method
Man made cotton		Iron clothes without any water or cover with a damp cloth on the areas you want to iron
Synthetics		
Silk		Dry iron the clothes inside out
Wool		
Cotton		Steam iron the clothes inside out
Linen		

Troubleshooting

There is no steam

- check that the water compartment is full
- check that the steam nozzle is clear
- check that the iron is plugged in, is working
- check that the temperature settings are correct.

Not enough steam is coming through

- Check that the temperature settings are correct.
- Check that the steam nozzle is clear

No Heat

- Check that the iron is plugged in and is in working order.
- Check the fuse.

Not hot enough or too hot

- Check that the temperature settings are correct.

Water drips from the steam nozzle

- Check that the temperature settings are correct.

Disposal Information

Do not dispose of this item in normal household waste. Used electrical appliances and electronic equipment must be disposed of separately. Please contact your local waste disposal authority for details of local arrangements.

THIS APPLIANCE IS EARTHED

IF THE SUPPLY CABLE OR CORD IS DAMAGED DO NOT USE

IF IN DOUBT CONTACT A QUALIFIED ELECTRICIAN

FOR DOMESTIC USE ONLY





CUCINA

by *Giani*

Giani Ltd
Stockport, UK, SK2 6RH
e-mail: support@gianiuk.co.uk