 


CUCINA
by *Giani*

GCWJE-M121012015

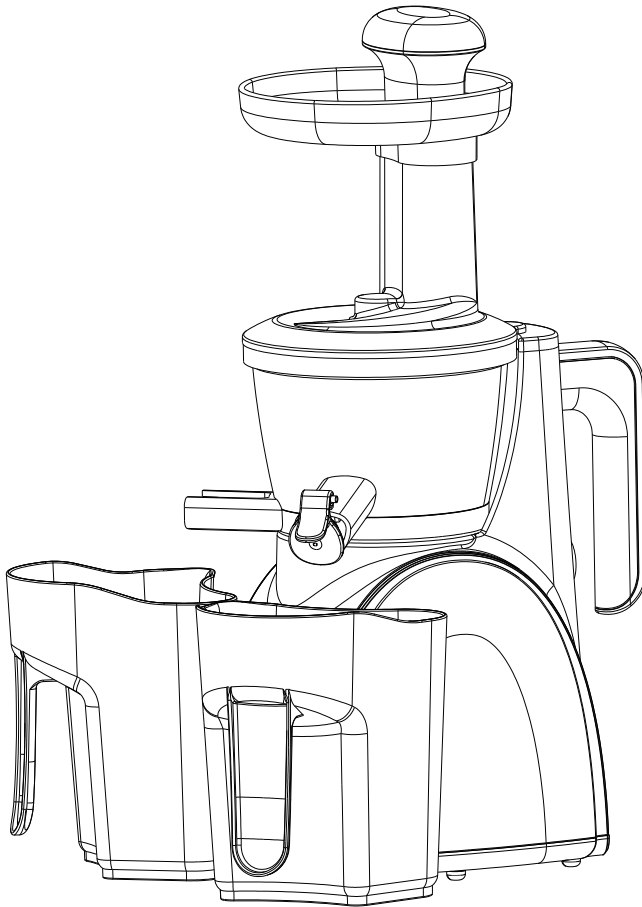

Slow Juicer

Instruction Manual

Model Ref: GCWJE-M1

Thank you for choosing the Cucina Slow Juicer.

Remove all packaging material. You may wish to keep the packaging for future use or storage for your appliance. Alternatively, dispose of accordingly.

Index

Important Safety Information.....	02
Product Overview.....	03
Assembling your Slow Juicer.....	04
How to use your Slow Juicer.....	06
Cleaning.....	08
Troubleshooting Guide.....	08
After Sales Support.....	09

Important Safety Information

Read all of the instructions before using this appliance and keep safe for future reference.

When using electrical appliances, basic precautions should always be followed, including the following:

- This appliance is for domestic use only. Do not use outdoors or on wet surfaces.
- Do not handle the plug or appliance with wet hands.
- Do not immerse the main body in water.
- Do not touch moving parts.
- Do not insert objects into the appliance when operating. If food becomes lodged or blocked, switch off the appliance and unplug from the mains before attempting to clean.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children without supervision.
- This product is not a toy.
- Do not use the appliance if any parts appear to be faulty, missing or damaged.
- Do not leave the appliance unattended when connected to the mains supply.
- Do not operate the appliance when it is empty.
- Always unplug from the mains supply before carrying out any cleaning, performing user maintenance or changing accessories.
- Switch off the appliance by the power switch before removing from the plug from the mains supply.
- Keep hair, loose clothing, fingers and all parts of the body away from openings of the appliance.
- Do not use the appliance if it has been dropped or damaged in any way.
- Check to ensure that the electricity supply matches that shown on the rating plate.
- Only use the attachments/accessories supplied with the product or recommended by Giani Ltd.
- If the supply cord is damaged, it must be replaced by a qualified service agent in order to avoid a hazard.
- Only use this appliance for its intended domestic use. Giani Ltd will not accept any liability if the appliance is subject to improper use, or failure to comply with these instructions.
- **The parts and accessories are not suitable for cleaning in a dishwasher.**



The maximum operating time is 15 minutes. Do not exceed this time or it will damage the motor.

 
Product Overview

- A. Hopper
- B. Squeezing Screw
- C. Strainer
- D. Spinning Brush
- E. Bowl
- F. Base
- G. Cleaning Brush
- H. Pusher
- I. Pulp Cup
- J. Juice Cup



Assembling your Slow Juicer continued

Fit the bowl to the main unit.

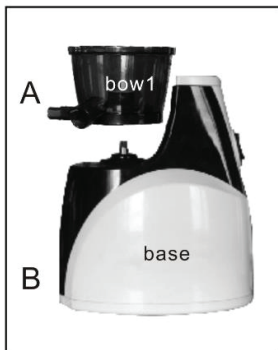

Fit the sieve into the bowl.

 


Always ensure that the teeth on the spinning brush interlock with the drive gear in the bottom of the juicing jug.




Assembling your Slow Juicer continued

Always ensure the pulp outlet on the sieve housing is inserted into the pulp outlet in the bottom of the jug.

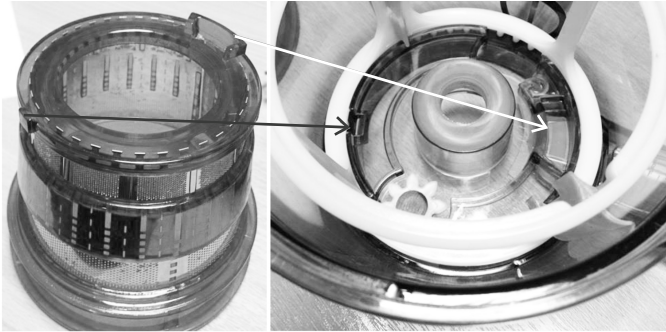

 The arrows on the jug and the sieve should line up.

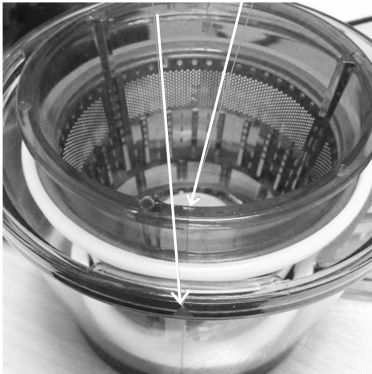

Insert the squeezing screw into the sieve and turn until it locates in position.



Assembling your Slow Juicer continued

Fit the hopper to the top of the bowl, aligning the arrows on the hopper and the bowl.



Twist the hopper clockwise into the head of the main unit until it clicks in position. There is a safety switch in the head of the main unit. The unit will only work when the lid is locked in place.



How to use your Slow Juicer

Before first use, clean all removable parts in warm soapy water and dry thoroughly. Ensure that the slow juicer is correctly assembled.

Position the pulp jug under the pulp outlet on the left of the unit and position the juice jug under the juice outlet on the right of the unit.

Prepare your ingredients by cutting and de-seeding them if required.

Plug in the slow juicer to the mains socket.

Insert your prepared ingredients into the feed chute on the hopper.

Switch on the juicer with the switch at the rear of the unit..

How to use your Slow Juicer Continued

If there is a blockage in the juicer, stop the juicer immediately. The reverse function can be used to help un-block and clear the obstruction. When the obstruction has been cleared, the parts should be cleaned thoroughly before using again



Do not attempt to juice hard materials such as seeds, pips, ice or frozen foods. This will damage the unit.

Always clean the juicer and the parts using the brush provided after each use. Do not overfill the hopper. Insert food slowly to allow the juicer time to work. The pusher should only be used if food becomes lodged. Push down gently.



Cleaning

Periodically clean the rubber parts of the spinning brush on the sieve.

Thoroughly clean all parts immediately after use to maintain the performance of the product and minimise staining.

Do not use harsh chemicals or abrasives to clean the parts of the juicer.

Never clean the parts in a dishwasher. **This will damage the parts.**

Troubleshooting Guide

Problem	Possible Cause	What To Do
No power to juicer	Juicer not plugged in	Check the juicer is plugged in
	Incorrect assembly	Re-assemble the juicer as per the instructions. Ensure the lid is locked correctly
The motor has stopped	There is a blockage in the juicing bowl	Press the reverse button to clear the blockage
	The motor has cut out due to over-use	Switch off, unplug and allow to cool down for 30 minutes before using again
Leaking underneath the bowl	The rubber plug is not correctly inserted	Remove all parts and check the position of the rubber plug
Staining on parts	This is the natural color from juice	This is normal. To reduce discolouration, ensure you rinse and clean the appliance immediately after use
Squeaking noise when juicing	Friction between the squeezing screw and bowl or food	The squeaking sound is perfectly normal. Do not run the juicer without any food
Too much pulp coming out with juice	There is excess food in the bowl clogging the strainer	Cut food, especially fibrous food into smaller pieces

After Sales Support

If you need help using your Slow Juicer, please contact Giani Ltd:

Tel: 0161 480 6204

Email: info@gianiuk.co.uk

Website: www.gianiuk.co.uk
(replacement instruction manuals are available to download)

WASTE ELECTRICAL AND ELECTRONIC EQUIPMENT

The Waste Electrical and Electronic Equipment Regulations 2006 (the WEEE Regulations) came into effect in the United Kingdom on 1st July 2007. The Regulations have been designed to prevent/reduce the amount of waste electrical and electronic equipment by promoting its reuse, recycling and recovery. The separate collection of WEEE saves energy and resources and avoids hazardous materials from going to landfill.



Electrical and electronic equipment is any product that relies on electricity or batteries to perform its primary function, for example a kettle or a watch.

Products which are covered by the WEEE Regulations have a crossed out wheelie bin symbol on either the product itself or the packaging.

The symbol aims to encourage you to identify and dispose of a WEEE product separately from other household waste when it reaches the end of its life.

From 1st July 2007, Giani UK Ltd is required to offer a free method of disposal of your old electrical and electronic equipment. Giani UK Ltd has contributed towards the development of WEEE collection facilities, known as Designated Collection Facilities (DCF), for consumers to use throughout the UK.

If you have old electrical or electronic product that has reached the end of its life, you can deposit it free of charge for segregation at Civil Amenity Sites which are registered as DCF.

To find your nearest WEEE collection point visit **www.recycle-more.co.uk**

Please have your postcode ready to type in the recycling bank locator.

You can also call the recycle-more helpline on **08450682572**





CUCINA
by *Giani*

Giani Limited - SK2 6RH

info@gianiuk.co.uk