

Instruction Manual

10.1 inch 2 in 1 Tablet



EGL

Contents

Getting Started	01	Personalising	15
Box Contents	01	Changing Wallpaper	15
Product Overview	02	Download New Apps	15
Features	02	External Storage	16
Know your Tablet.....	03	Inserting a Memory Card.....	16
Desktop Layout	05	Formatting a Memory Card.....	17
Using the Tablet	08	Data Management & Security ...	18
Before First Use	07	Backing up your Tablet.....	18
Starting up.....	07	Improving Security.....	19
Using the Keyboard.....	08	Specification	21
Powering up the Tablet.....	09	Safety Information	22
Screen Settings	10	After Sales Support	24
Connections.....	11	Product Guarantee (UK Only).....	24
User Interface	12	Disposal Information	24
Start Menu.....	12		
Applications.....	12		
Shortcuts	12		
Cortana Search	14		
Windows Centre.....	14		



Getting Started

Thank you choosing to buy an EGL product. All products brought to you by EGL are manufactured to the highest standards of performance and safety.

Before use, please read this manual carefully. It gives important instructions about safety, use and maintenance of your EGL 2 in 1 Tablet.

We hope you enjoy using your purchase for many years to come.

Remove all packaging material. You may wish to keep the packaging for future use or storage of your EGL 2 in 1 Tablet. Alternatively, dispose of accordingly.

Box Contents

When opening the box please ensure that the items listed below are included within. If an item is missing please contact where you purchased the item.

- 10.1" 2 in 1 Tablet
- Keyboard
- Power Adaptor
- Instruction Manual

Product Overview

Features

Browse the Web

Visit your favourite websites.

Check your e-mail

Keep in touch with friends and family.

Watch Youtube™ videos

Browse the world's most popular video-sharing community.

Discover thousands of apps for Windows™

Install games, applications and more via the installed Microsoft Store™

Connect to the Internet wirelessly

High speed Wi-Fi 802.11 b/g/n networking.

Enjoy your media library anywhere

Portable powerhouse plays your chosen music, videos and photos

 
 
MicroSD memory card reader

Expand your storage using a Micro SD card.

Built-in cameras

Convenient front and rear facing 2MP camera.

Know your Tablet

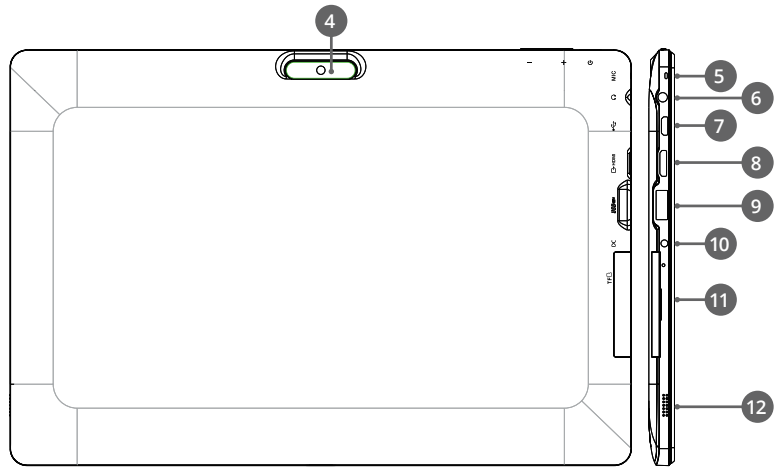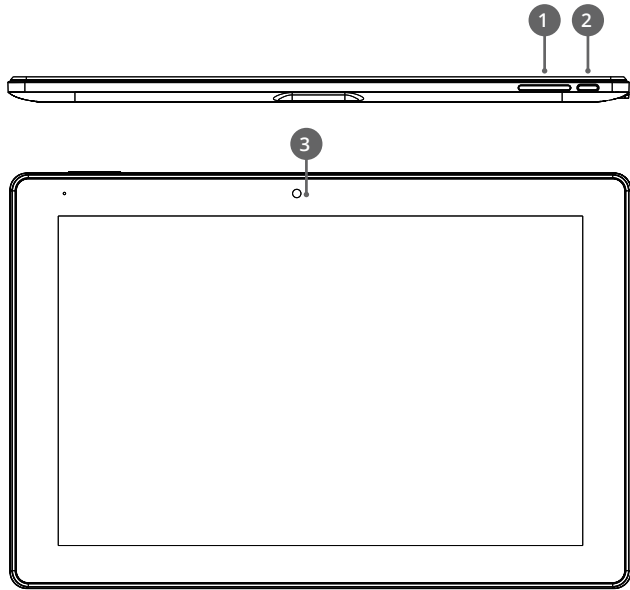

1. Volume Up and Down

Press to turn the volume up or down.

2. Power

Press to turn your Tablet on, to turn screen on or off, or press and hold to access the power off menu.

3. Front Facing Camera

2 megapixel Front Facing camera.

4. Rear Facing Camera

2 megapixel Rear Facing camera.

5. Microphone

Microphone input to record sound or make calls through your tablet.

6. Aux Jack

Audio output connection for headphones.

7. USB Type-C

USB Type-C Port to connect your devices

8. Mini-HDMI Port

Port for mini-HDMI cable connection.

9. USB 3.0 Port

USB 3.0 Port to connect your USB devices.

10. DC Charging Port

Port to plug in included charger.

11. MicroSD card slot

Insert a MicroSD card to expand your Tablets storage..

12. Speakers

Base speakers for audio output.

Desktop Layout



1. **Dynamic Tiles** - Display useful information at a glance without opening the app.
2. **Expand** - Expand the start menu to show full names of buttons.
3. **Microsoft™ Account** - Change account settings or switch to another user account.
4. **Settings** - View and change any system settings.
5. **Power** - Shut Down, Hibernate or put your Tablet to sleep.
6. **Start Menu** - Access installed applications, Microsoft Store™, files and Dynamic Tiles.
7. **Search Bar** - Quickly find files, directions, information or the name of a song.
8. **Task View** - Manage your applications with Virtual Desktops.
9. **Taskbar** - Manage your open applications and shortcuts to your favourite applications.
10. **Notification Area** - View all notifications, date and time.
11. **Peek** - Quickly show your desktop

Using the Tablet

Before First Use

- Before first use, please make sure the Tablet is fully charged. If not, connect the power adaptor so your Tablet can charge fully.
- Charging time is at least 6 hours the first time, 4 hours thereafter.

Note: This Tablet contains a Built-in type rechargeable Li-ion battery, the charger must be a standard adaptor (Input: AC100~240V 50/60Hz), this Tablet includes DC charging.

- Ensure that you have a good wifi connection, with your network name and password available.

Starting up

Turn on the device by holding in the power button for 2/3 seconds until the screen turns on.

The first time you use your device, the startup wizard will help you set up your device:

- Language
- Date & Time
- WiFi Connection
- Location service options
- Third-party applications
- Necessary Updates
- Account Synchronization

Using the Keyboard

Connecting

To connect your Tablet to the Keyboard you must follow the steps below:

- Firstly lay the keyboard on a flat surface.
- Connect the Tablet by aligning the notch and connector pins with the pins on the keyboard.
- Gently push the Tablet down into the keyboard until you hear a click sound which indicates that the keyboard is connected to the Tablet.
- The keyboard will work automatically when connected to the Tablet.

Powering up the Tablet

 
 
To turn the Tablet on

Press and hold the Power key until the screen turns on. Wait until the Desktop screen appears; the Tablet is now ready for use.

To turn the Tablet off

Press the start button and click on the power icon. This then gives the option to shutdown, sleep or restart.

Alternatively, press and hold the Power key until you see "Slide to shut down your PC", then slide down to shut down your Tablet.

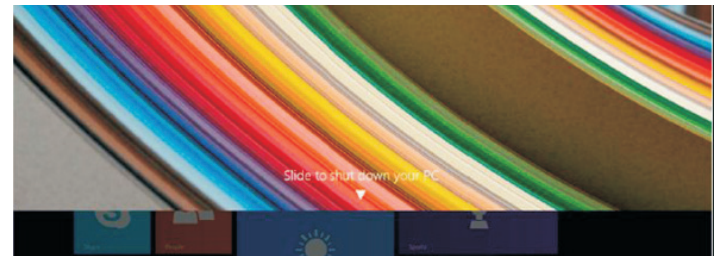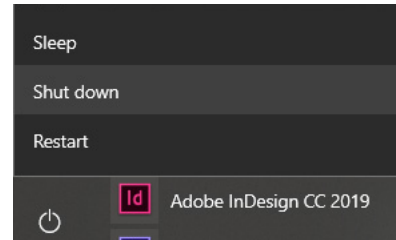


Screen Settings

Turning the Screen On or Off

When the Tablet is on, you can turn off the screen to conserve power and protect the screen. Simply press the start button and click on the power icon, then choose sleep.

NOTE: To conserve battery power, the screen can be set to turn off automatically when the Tablet is not in use (between 1 minute and 5 hours). The screen timeout option can be found in the display menu.

 It is strongly recommended that you sign into/register for a Windows account (needed for the installation of new apps). When prompted it is also recommended that you agree to backing up your Tablet. This creates copies of all of your files should you ever need to restore the Tablet.

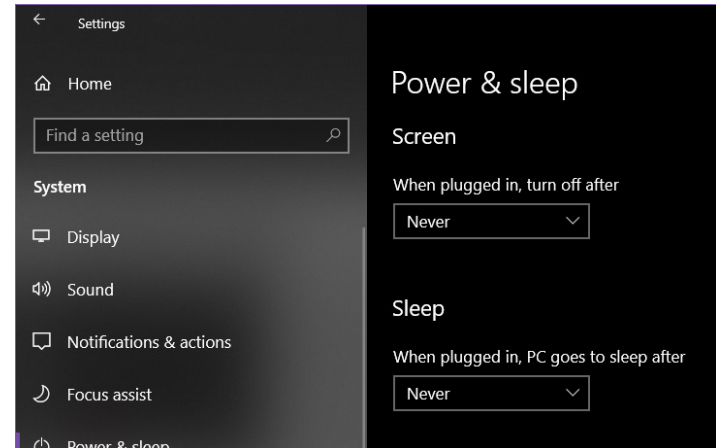

Connections

WiFi


The Notification bar displays icons that indicate your Tablet's Internet status.



Connected to a Wi-Fi network (waves indicate connection strength).

 


There are no Wi-Fi networks in range, or the Wi-Fi is not connected.

Open the Settings menu by pressing the start button and clicking on the cog/settings icon .


Note: Settings icon can also be found on the desktop. Open the Network and Internet menu and turn the WiFi on.

Select your network from the list of available networks. The Tablet will prompt you to confirm connection to the network. Touch Connect to confirm. If the network is secured (as indicated by a Lock icon), the Tablet will prompt you to enter a password or other credentials.

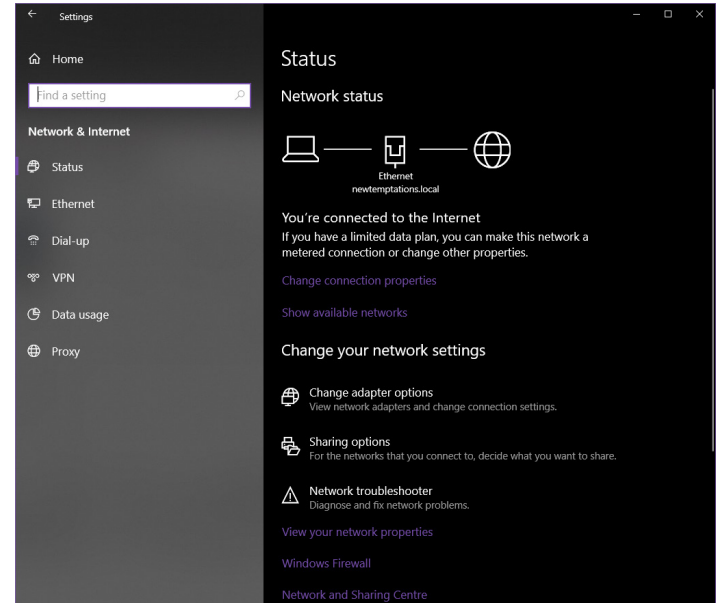

User Interface

Start Menu

 
 
To open the start menu select the icon  in the bottom left hand corner of the desktop. Once the menu has been opened you will be greeted with a variety of options.

Applications

Once in the start menu, a list of all installed applications is visible, sorted alphabetically. Tiled shortcuts will appear on the right for selected pre-installed applications. There is also the option to add tile shortcuts for easier access to your most used applications.


Adding a shortcut tile to start menu

Click the start button. Right click on an application icon and select pin to start. This will create a tile in the start menu for the selected programme.

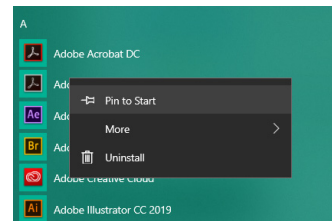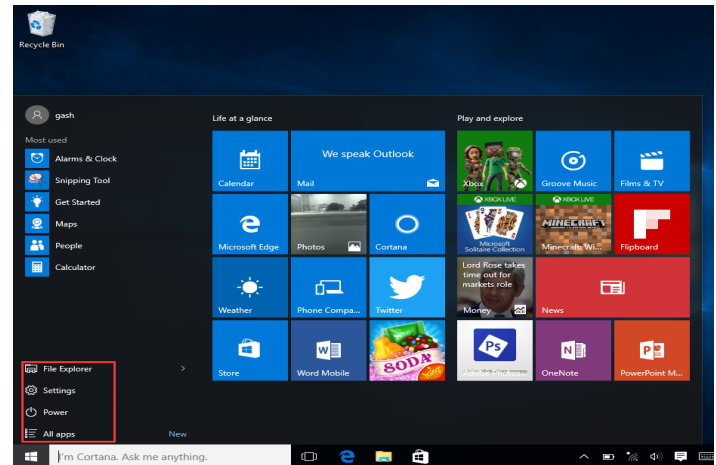


Removing shortcut tile from start menu

 Click the start button. Right click on an application tile and select unpin from start. This will remove the desired program from the start menu but not from your Tablet.

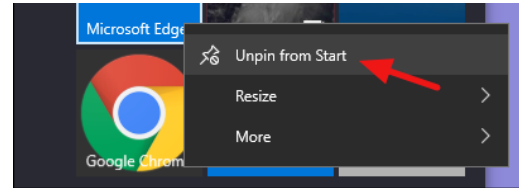


Adding shortcut to the taskbar

 Click the start button. Right click on an application tile and select pin to taskbar. This will add the application icon to the taskbar at the bottom of your screen.

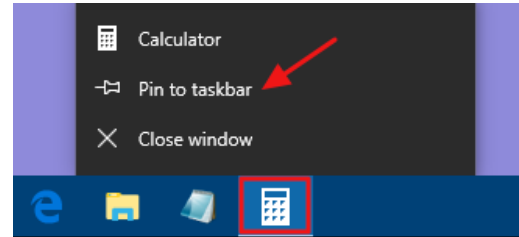


Moving a Desktop shortcut

 Click and hold onto the icon you wish to move. As you drag the icon it will become semi-transparent. You can then slide it to the desired location, and then release your the mouse.

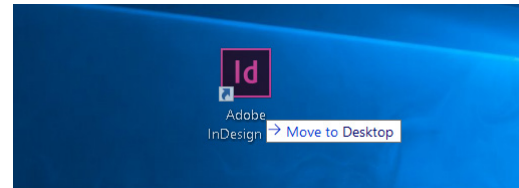


Removing a Desktop Shortcut

 Right click on an application icon and select delete from the drop down menu that appears.

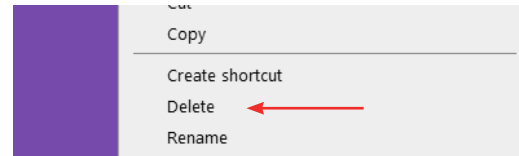


Cortana Search

 Windows 10 comes with the feature of Cortana. This is a search feature on the task bar. To use this click into the search bar and type what you wish to search for. This can be a feature or setting on your device, or on the web.

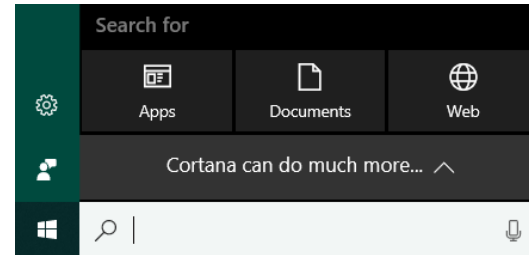

Windows Centre

The Action Center is where you'll find application notifications and quick actions. On the bottom right corner of the screen, look for the Action Center icon . The Action Center allows access to quick settings, in the form of small boxes at the bottom of the panel.



Notifications within the action centre are sorted into categories by app, and users can click a small 'x' to clear notifications.

 
The Action Center also supports actionable notifications, such as recent text messages, emails or social media integration.



Personalising

Changing your wallpaper and themes

Press start  and select the settings icon . Select the personalisation menu where you will be greeted with the options to change your background/theme for the Desktop and lockscreen. In this section you also have the option to change the Windows accent colours and choose which elements will use the colour.

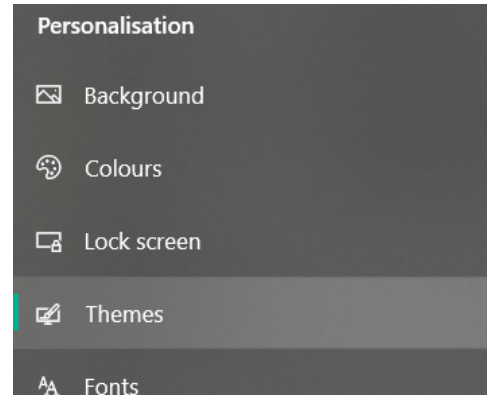

To download new apps

To install new apps approved by Windows, click the Windows Store icon on the bottom task bar. There you will find over 1 million apps including many of which are free. Even if you only going to use free apps you will still need to create a Windows account but you dont need to enter your credit card details to do this.



External Storage

Inserting a Memory Card

This Tablet accepts microSD memory cards. This allows you to increase the memory capacity of your Tablet and also to play media files that are stored on the memory card.

Align the memory card with the microSD slot. The metal portion of the memory card should be facing away from the screen.


Push the card into the slot, until you hear a click. This signifies that the card is locked into place.

Do not attempt to insert objects other than a SD card into the card slot. A compatible memory card should fit easily into the card slot. If the card will not easily fit, check the alignment of the card. Do not attempt to force it into the slot. Avoid touching the metallic contacts of the memory card.

 


Formatting a microSD card

Note: Formatting an SD card will wipe any and all data from the SD card's storage. If you wish to retain any files please transfer them onto a Tablet or other device before formatting.

Please ensure the correct drive is selected before formatting. Once formatted this cannot be undone. Open File Explorer by clicking on the icon  on the task bar and navigate to "This PC"

Find the drive where your SD Card is located
Right-click, and when the menu appears click Format.

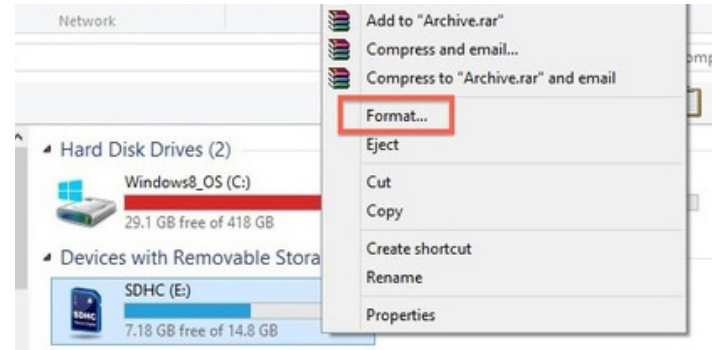

Data Management & Security

 
Backing up your Tablet

File History

Use File History to back up to an external drive or location. Select the Start button > Settings > Update & Security > Backup > Add a drive and then choose an external drive or network location for your backups.

If you're missing an important file or folder that you've backed up, here's how to get it back:

In the search box on the taskbar, enter Restore files, and then select Restore your files with File History. Look for the file you need, then use the arrows to see all its versions. When you find the version you want, select Restore to save it in its original location. To save it in a different place, press and hold (or right-click) Restore, select Restore to, and then choose a new location.

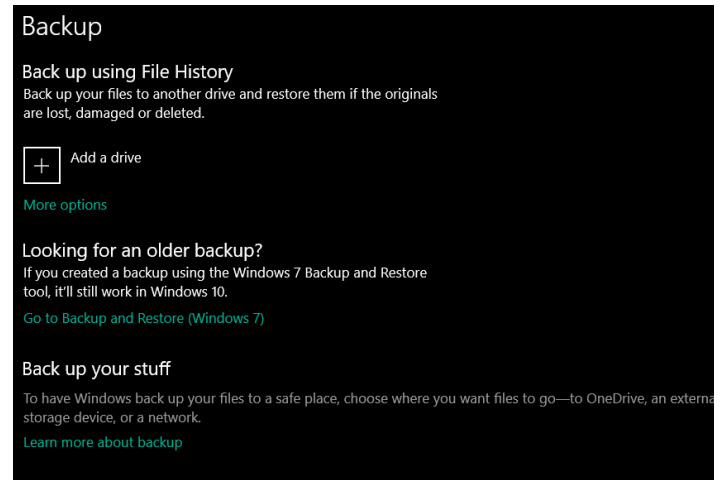



Improving security on your Tablet

Online

In order to avoid online threats we recommend that you install antivirus and security software on your device immediately after set up and keep these, your internet browser and other software up to date to take advantage of security fixes.



Physical theft

If you store valuable information on your Tablet including passwords and logins for personal accounts etc. you may want to enhance the security of your Tablet in case it is stolen or lost. This includes enforcing the log in with your Windows account and a PIN.

Erasing your personal data

If you sell your Tablet on, or discard it you should erase the data in memory, before you do so. This securely erases your data so that it cannot be recovered. Please note that simply returning your Tablet to factory settings is not a reliable way of erasing your personal data (unless you have first encrypted your data).

Encrypting your data

Sign in to Windows with an administrator account. Select the Start button , then select Settings  > Update & Security > Device encryption. If device encryption is turned off, select Turn on.

If device encryption is not available on your device, follow these steps to turn on standard BitLocker encryption instead:

Sign in to your Windows device with an administrator account. In the search box on the taskbar, type Manage BitLocker and then select it from the list of results. Select Turn on BitLocker and then follow the instructions.

Specification

CPU	Intel Apollo Lake N3350
Memory	RAM: 4GB
Storage	Built in Flash memory: 64GB Expandable further by up to 128GB
Network/Wi-Fi	802.11b/g/n
USB	USB Type-C, USB 3.0 x1
Other Ports	DC Connector Micro SD slot Mini-HDMI
Cameras	Front & Rear 2MP
Audio	3.5mm headphone jack Stereo speaker
Screen	10.1" IPS LCD (1280 x 800)
Battery	Built-in lithium polymer battery, 7.4V 3000mAh
Operating System	Windows 10
Connectivity	Bluetooth

Safety Information

WARNING - To reduce the risk of fire, electric shock, or injury:

- DO NOT expose the Tablet to high temperatures, direct sunlight, moisture, rain or a highly dusty environment.
- DO NOT use the Tablet in prohibited areas (ie; airplanes).
- DO NOT use the Tablet whilst driving or walking.
- DO NOT dispose of the Tablet in a fire to avoid explosion.
- DO NOT disconnect the Tablet from the mains power supply by pulling the cord, switch it off and remove the plug by hand.
- DO NOT attempt to disassemble the Tablet, or use alcohol, thinners or benzene to clean the Tablet as this will cause damage to the unit.
- DO NOT disassemble, repair or modify the Tablet by yourself. Refer servicing to qualified personnel only.
- Never subject the Tablet to any heavy impact such as dropping or shaking.
- Keep away from magnetic sources.
- It is not recommended to use the headphones at a high volume for an extended period of time as this may cause damage to your hearing.
- Once the casing has been tampered with, the company shall not be liable for any resulting damages or faults.
- Clean with a dry cloth only. Make sure the Tablet is turned off before cleaning. Do not use liquid or abrasive cleansers.
- Only use this Tablet for its intended domestic use. EGL will not accept any liability if the Tablet is subject to improper use, or failure to comply with these instructions.
-

- Keep the Tablet and its power supply cord away from heat or sharp edges that could cause damage.
- Keep the power supply cord away from any parts of the Tablet that may become hot during use.
- Use of an extension cord with the Tablet is not recommended.
- This Tablet should not be operated by means of an external timer or separate remote control system.
- Keep the Tablet away from flammable materials.
- Avoid dropping the Tablet. Do not allow the display screen to become damaged as this cannot be replaced/ repaired.
- When the Tablet is formatting or a file is uploading or downloading, do not suddenly disconnect the Tablet from the external sources as this could cause an application error.
- The company reserves the right to improve the product specification and design. The information is subject to changes without prior notice.
- This Tablet has no waterproof function.

After Sales Support

If you need help using your product, please contact Giani Ltd:-

Telephone: 0161 480 6204. **Email:** info@gianiuk.co.uk. **Website:** www.gianiuk.co.uk.

(Replacement instruction manuals are available to download from the website)

(Technical Support only available during Monday to Friday between 09:00 - 17:00)

Product Guarantee (UK Only)

If your product ceases to function within 1 year from the date of purchase, the retailer will replace it free of charge, provided:

- You have not misused, neglected or damaged it.
- There is a fault with your products hardware and not the Laptops software.
- It has not been modified (except by Giani Ltd).
- It was not purchased second hand.
- It has not been used commercially.
- You can supply proof of purchase, indicating the price you paid and where and when the product was purchased.

This guarantee does not affect your statutory rights.

Disposal Information

Important information for correct disposal of the product in accordance with EC directive 2012/19/EU

At the end of its working life, the product must not be disposed of as urban waste. It must be taken to a special local authority differentiated waste collection centre or to a dealer providing this service. Disposing of a household product separately avoids possible negative consequences for the environment and health deriving from inappropriate disposal and enables the constituent materials to be recovered to obtain significant savings in energy and resources.

As a reminder of the need to dispose of household products separately, the product is marked with a crossed-out wheeled dustbin.

EGL



Giani Limited, Stockport, Cheshire, SK2 6RH