


CUCINA
by *Giani*

IM-GCGH023G110213

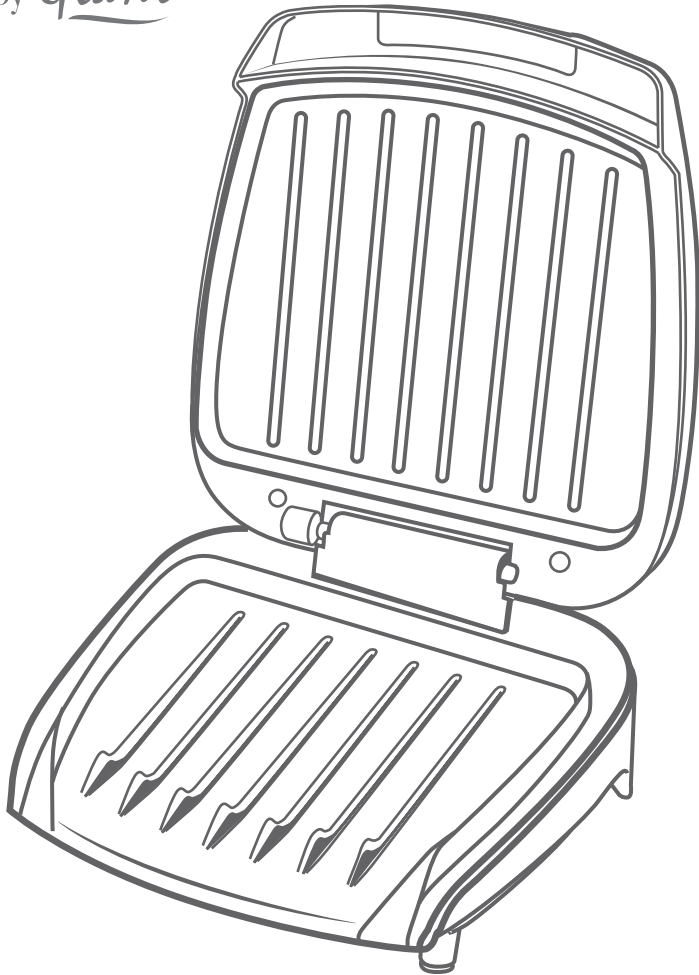

2 Portion Diet Low Fat Grill

Instruction Manual

Model Reference: GC-GH-023G

Congratulations on choosing to buy a Giani Cucina product. All products brought to you by Giani are manufactured to the highest standards of performance and safety. We hope you enjoy using your purchase for many years to come.

Before Use

Please ensure you follow these instructions:

- Clean the plates using a damp sponge, rinse and dry carefully.
- After applying a fine coating of oil to the plates, close the appliance and plug into a mains plug socket.
- As the product is new it will give off a 'new' smell and a smoke haze, allow the grill to heat up for several minutes to burn off the odour.
- Let the grill cool down fully and wipe the cooking plates down with a damp cloth.

Safety Instructions

There is a risk of fire and electrical shock with all electrical appliances, which may cause injury or death so please follow the instructions carefully:

- The appliance must ONLY be plugged directly into a household mains socket, never connect to an external switching device such as a timer or a variable circuit as this may lead to a hazardous thermal cut out of the appliance.
- The surfaces of this appliance get very hot, only touch the handles when in use.
- Place the appliance on a heat resistant surface or mat, DO NOT place the appliance on any heat sensitive surface whilst in operation.
- To prevent over heating ensure that there is enough space all around the appliance when in use.
- Beware of hot steam when you open the appliance.
- NEVER leave the appliance unattended when cooking, even if it is only for a moment.
- Food can burn! Keep the appliance away from curtains or other flammable material in case of fire.
- Do not use if the power cord is damaged.
- Combustible fuels must not be used with this appliance.
- Before use, please check the voltage of the product is compatible with your mains power.
- Keep away from children, this appliance must be used by a responsible adult. Make sure that the power cable is not within reach of children.
- The appliance is intended solely for private use and not for commercial use.
- Always unplug the appliance from the mains socket whenever it is not in use and when cleaning the appliance. Pull on the plug to remove it from the mains socket, NEVER pull on the power cord.
- Test the appliance and the cable regularly for damage, do NOT use if there is damage of any kind.
- DO NOT attempt to repair the appliance yourself, all electrical appliances must be repaired by a qualified electrical engineer.
- Keep the appliance away from heat, direct sunlight and moisture.
- DO NOT use the appliance outside.
- Under no circumstances immerse the appliance in water or any other liquid.
- DO NOT handle the appliance with wet or damp hands.
- Should the appliance become damp or wet, unplug from the mains socket immediately, DO NOT touch the appliance.

Directions For Use

- Plug the appliance into the mains, the RED indicator light will come on.
- Once the appliance has reached the optimum cooking temperature the RED indicator light will go out again.
- Place your food such as burgers, boneless meat, fish or vegetables onto the bottom cooking plate

NOTE: If your food is very lean we recommend that a light spray of oil is used to prevent the food from sticking.

- Close the top cooking plate, the floating hinge allows the lid to adjust to the height of the food in the grill and the weight of the plate will gradually and evenly press on the food during cooking.
- The grilling time depends on the type and thickness of the items you are cooking, you can regularly check your food throughout the grilling process by lifting the top plate by the handle (be careful of the steam when opening)
- When grilling is complete, lift the top plate by the handle and remove the food with a wooden or plastic spatula. Never use metal utensils as this will damage the non stick cooking plates.
- When you have finished cooking unplug the appliance from the mains and allow to cool.

Cleaning

- Only clean the appliance once it has fully cooled down.
- Never place the appliance in water or under running water.
- Clean the outside of the appliance with a damp cloth and dry thoroughly.
- To clean the plates use a damp sponge with washing up liquid. Rinse and dry with care.
- To remove burnt on food try soaking the area with vegetable oil for 5 minutes to soften, or use a non metallic scrubbing pad, DO NOT use a scouring pad or abrasive cleaner.
- When cleaning the inside hold the top cover firmly to prevent accidental closing and injury.

Storage

- Wind the cord carefully and store in a dry area, the appliance can be stored vertically to save space.

Technical Specifications

UK Guarantee

Please keep these instructions, the sales receipt and if possible the carton with the inner packaging.

This appliance is guaranteed for consumer use for 12 months.

This guarantee covers defects under normal use from date of purchase and ceases to be valid in the event of alteration or repair by unauthorised persons, overloading of the appliance, use of non approved accessories, use of force and normal wear and tear.

220~240V 50~60Hz 750W

Disposal



This marking indicates that this product should not be disposed of with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources.

This appliance complies with the requirements of Directives 89/336 EEC (Electromagnetic Compatibility) and 73/23/EEC (Electrical Safety of Domestic Appliances) amended by Directive 93/68/EEC (CE Marking)



CUCINA
by *Giani*

Giani Limited - SK2 6RH